EX17008 Web-Smart Switch Installation Guide



1 Unpacking

Unpack the items. Your package should include:

- One EX17008 Web-Smart switch
- > One AC power cord
- Rack-mounting hardware brackets
- > One CD containing this user's guide

If items are missing or damaged, notify your EtherWAN representative. Keep the carton and packing material.


2 What Else You Need

- > Category 5 or better Ethernet cables
- Notebook PC with Ethernet (RJ-45) Interface and installed Web browser

3 Select a Location

- Desktop installations: Mount on a flat table or shelf surface.
- Rack installations: Use a 19-inch (48.3centimeter) EIA standard equipment rack that is grounded and physically secure.
- Identify a power source within 6 feet (1.8 meters).
- Choose a dry area with ambient temperature between 0 and 40°C (32 and 104°F).
- > Do not cover fans on the rear and side.
- Keep away from heat sources, sunlight, warm air exhausts, hot-air vents, and heaters.

- > Be sure there is adequate airflow.
- Keep the switch at least 6 ft (1.83 m) away from the nearest source of electromagnetic noise, such as a photocopy machine.

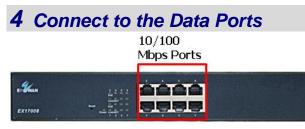

The switch is equipped with eight 10/100 Mbps RJ-45 port that provide IEEE802.3at Power over Ethernet (PoE), with up to 30 Watts per port (50 - 57VDC, 600mA Max.) These ports can be connected to PoE devices such as IP surveillance cameras or Voice Over Internet Protocol (VoIP) phones.

- A. Insert one end of a Category 5 or better Ethernet cable into a switch port.
- **B.** Connect the other end into the Ethernet port of the device.
- C. Repeat steps A and B for each additional device you want to connect to the switch.

5 Apply AC Power

- A. Connect the female end of the supplied AC power cord to the power receptacle on the switch rear panel. Connect the other end to a grounded 3-pronged AC outlet.
- **B.** On the switch rear panel, move the ON/OFF switch to the ON position.

When you apply AC power:

- All green PoE and Link/ACT LEDs blink momentarily.
- > The fans start.
- > The yellow **Power** LED goes ON.
- The Link/ACT LEDs for every port connected to a device flash, as the switch conducts a brief Power On Self-Test (POST).

6 Configure the Switch

After the switch passes its POST, perform a basic configuration of the switch.


- A. Connect an available 10/100 Mbps RJ-45 switch port to a PC using a Category 5 or better Ethernet cable.
- **B.** Confirm that the **Link/ACT** LED for the switch port to which the PC is connected is ON.
- **C.** Configure the PC's TCP/IP settings to use the subnet 192.168.2.2.
- **D.** In a Web browser, type <u>http://192.168.2.1</u> in the address bar and press Enter.
- E. At the User Log In screen, type **admin** for the ID (username)and password (both are case sensitive), and then click **OK**.

USER LOG IN								
Site:	192.168.2.1							
ID:	[
Password:								
	ОК							

Page 1



F. In the left pane, click Administrator > System IP Configuration.

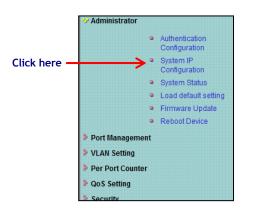

- **G.** At the System IP Configuration page, perform one of these steps next to **IP Configure**:
 - If your network uses a DHCP server, click **DHCP**.
 - If your network uses static IP addresses, click Static. Enter the switch's IP
 Address, Subnet Mask, and Gateway settings.

Setting	Value		
IP Address	192 . 168 . 2 . 1		
Subnet Mask	255 255 0		
Gateway	192 168 2254		
IP Configure	Static OHCP		

- H. Click Update.
- I. In the left pane, click Administrator > Authentication Configuration.

	* Administrator		
Click here -	\rightarrow	•	Authentication Configuration
		•	System IP Configuration
		•	System Status
		•	Load default setting
		•	Firmware Update
		•	Reboot Device
	Port Management	t	
	VLAN Setting		
	Per Port Counter		
	QoS Setting		
	Security		

7 Front Panel LEDs

LED	Color	Status
Power	Yellow	ON = switch is receiving power.
PoE	Green	ON = Power Device (PD) is connected.
(port number)		OFF = PD is disconnected.
Link/ACT	Green	ON = valid network connection.
(port number)		OFF = no data transmission on port.
		Flashing = port is sending or receiving data.

Congratulations! You have successfully

performed a basic installation. For advanced

configuration information, refer to the user

guide.

- J. At the Authentication Configuration page, complete the following fields:
 - **Username** = enter a new username.
 - **Password** = enter a new password.
 - **Confirm** = re-enter the new password.

Username and password are case-sensitive. Permitted characters are a-z, A-Z, 0-9, underscore, and plus, minus, and equals signs.

uthentication Configuration							
Setting	Value						
Username	admin	max:15					
Password Confirm	•••••	max:15					
		Update					

K. Click Update.

Copyright 2016 EtherWAN Systems, Inc.